


GIMX USB Adapter First Time Set-up guide

This guides aimed to walk you through setting up the adapter for the first time.

1. Make sure your Logitech wheel is configured on your PC. For example Logitech software and drivers installed. (See Logitech website for more info)
2. Download and install the GIMX software from the GIMX website. (just google “GIMX installation” and it should appear as the first search result)
3. During Installation you will be prompted to download a config file. Select “Yes” and then choose the file for your wheel model. (for example if you have a Logitech G25, select “LogitechG25_G29.xml”)


***for OSW wheels you will need to create your own profile. Message me on ebay if you need instructions.*

4. Now restart your PC if you have already been asked to do so.
5. Connect the GIMX adapter to your PC (the male USB with the pins coming out of the back) and connect the PS4 to the GIMX adapter via a USB cable. Also connect your PS4 controller to your PC/laptop.

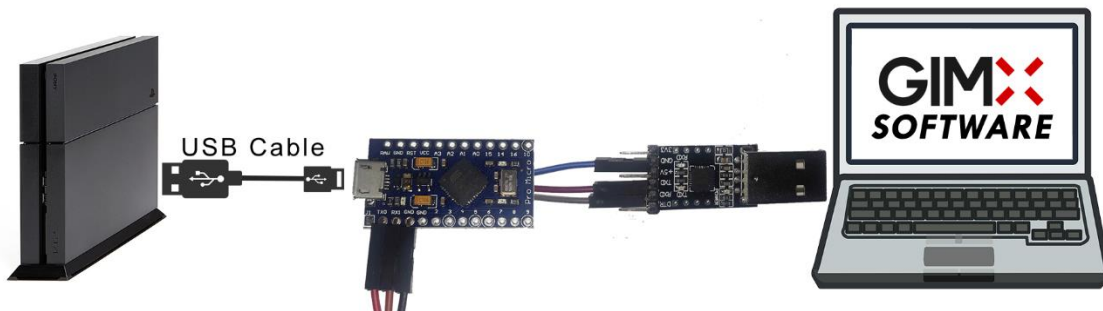

6. Run the GIMX software on your PC/laptop and turn on the PS4 by the power button on the console itself.
7. Press the “Check button” to see if everything is setup correctly. See the example below for how it is supposed to look. (The “Port” may be different in your case.)
8. If everything is ok in GIMX select “Start” and then press the playstation button on your control pad. You should now be good to go.

If you downloaded the wrong config file or you need to download a different config file after the initial setup, in GIMX select “Help > Get Configs”. Any issues please contact me on ebay.

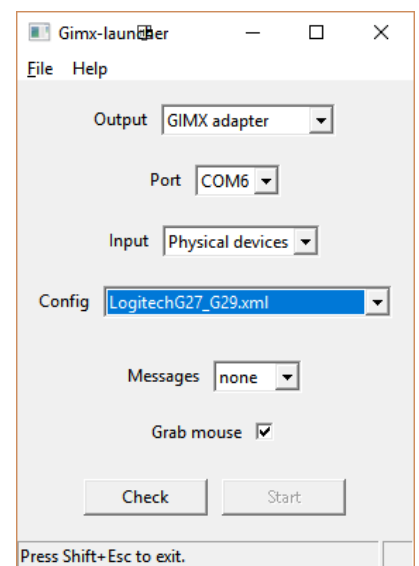

Troubleshooting

Wheel randomly disconnects!

- Random disconnects could be caused by Windows disabling USB ports to save power. Make sure to disable this feature in Windows Device Manager. Message me on ebay if you are unsure how to do this.
- Random disconnects could also be caused by anti-virus (depending on your ant-virus settings) but it is unlikely. If you keep getting wheel disconnects then try disabling anti-virus temporarily to see if that makes any difference but this should be the last thing that you do. The other solution above this should be attempted first.

I have disconnected some or all of the coloured cables on the adaptor and don't know which order to put them in!

If this happens then you must put the cables back in a specific way. On both parts of the adaptor next to each pin you will see an abbreviation of what each pin is.

This is how it must be connected...

TXD > RXD

RXI > TXD

GND > GND

If you are unsure then please message on ebay.

Thanks